

THE TIME CHANGER



ALAIN SILBERSTEIN



USER MANUAL

SUMMARY

1

SETTINGS

HOURS, MINUTES & SECONDS

2

CALIBRATION

HANDS INDEXING

3

CHRONOGRAPH MODE

4

ANNEXES

INFORMATION, TIPS

SETTINGS HOURS

1 ENTERING HOUR SETTING MODE

By pressing the red button until the red hand oscillates



Hour setting
Red hand

When the hour hand (red) shakes every 4 seconds,
This confirms that you have entered the setting mode successfully.

2 ADJUSTING THE POSITION OF THE HOUR HAND

By pressing successively, point the red hand towards the desired time



Counterclockwise

OR

Clockwise

3 VALIDATION


Validate the hour by pressing both buttons simultaneously. If no action is performed for 68 seconds, the time is not changed and returns to the original time.



Press simultaneously


SETTINGS MINUTES

- 1 ENTERING MINUTE SETTING MODE**
By long pressing the yellow button, until the yellow needle oscillates

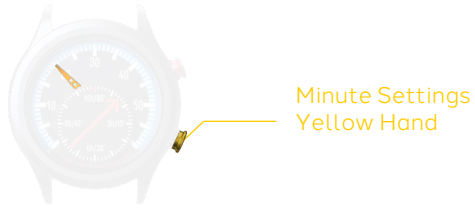


When the minute hand (yellow) shakes every 4 seconds,
This confirms that you have entered the setting mode successfully.

- 2 ADJUSTING THE POSITION OF THE MINUTE HAND**
By successive presses, point the yellow hand towards the desired minute

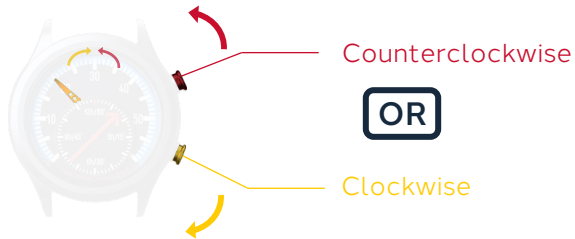

- 3 VALIDATION**
Validate the minutes by pressing both buttons simultaneously. If no action is performed for 68 seconds, the minutes are not changed and return to the initial time.

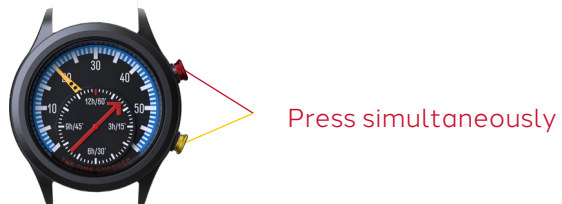


Validating minutes also resets seconds to 0 seconds. To set the seconds precisely, the minutes must therefore be validated at the moment when the minute of an official clock is exceeded.

SETTINGS CALIBRATION

The operation described here aims to reposition the hands perfectly in front of the indexes, and perform a calibration operation.


- 1 ENTRY INTO CALIBRATION MODE**
By pressing and holding both buttons simultaneously.

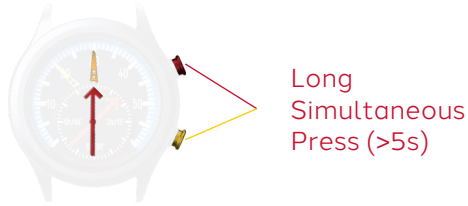

The hands are positioned at 12:30 p.m.


- 2 POSITIONING OF THE HANDS.**
Calibration of the minute hand, then the hour hand.

MINUTE

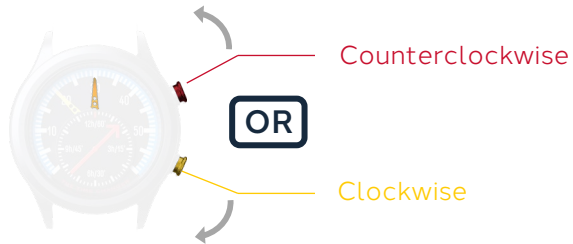

Position the minute hand on the 30 index
Validation by pressing both buttons simultaneously 1s
This validation switches to the hour hand setting

HOUR

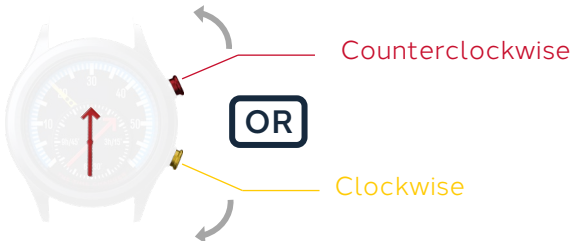

Position the hour hand on the 12 index
To exit calibration mode: Validation by pressing both buttons simultaneously 1s

CHRONOGAPHE MODE

Grâce au capacité de pilotage des micro-moteurs en silicium, vous découvrirez un mode chrono aux multiples facettes.

La durée maximale du Chronomètre est de 1 heure.

1 ENTERING CHRONOGRAPH MODE

By a quick double press on the yellow button



Once the mode is activated, the yellow hand becomes the seconds hand and is positioned at -1 second. The red hand becomes the minute hand and is positioned at 12/60'

2 CHRONOGRAPH MODE



START
1 short press



STOP
1 Short Press



RESET
1 Short Press

CHRONOGAPHE MODE

3 FLYBACK FUNCTION



FLYBACK

1 LONG PRESS

By pressing down on the **yellow button**, the hands freeze to allow you to **read or note a first stopwatch**.

By releasing this button, the hands automatically return to zero* and restart the chronometry of a second time.

***Important :** The hands will not be positioned on zero, but on the number of seconds that have elapsed since the chronograph stopped.

4 SPLIT-SECONDS FUNCTION



RATTRAPANTE
(SPLIT-SECONDS)

1 LONG PRESS

By long pressing the **red button**, the hands freeze, allowing you to read or note an **intermediate time**.

By releasing this button, the hands are automatically repositioned on the elapsed real time.

***Important :** The hands will be positioned taking into account the number of seconds that have elapsed since the chronograph stopped measuring the split time.

5 EXIT OF CHRONO MODE

Pause the chronograph (Red), then perform a reset (Yellow). Finally, press the yellow button one last time.



1- STOP
1 Short Press



2 - RESET
1 Short Press



3 - HOUR MODE
1 Short Press

ANNEXES

① GENERAL RECOMMENDATIONS

② CLEANING

③ WATERPROOFING

④ BATTERY CHANGE

⑤ GUARANTEE

⑥ AFTER-SALE SERVICE

⑦ LEGAL

⑧ RECYCLING

ANNEXES

1 GENERAL RECOMMENDATIONS

When storing your timepiece, it's best to keep it in the box you received at the time of purchase or in a case designed for this purpose.

If you own several timepieces, avoid direct contact between them, which could damage their external appearance. Store your timepiece in a well-ventilated place, away from moisture and heat.

You are strongly advised to avoid prolonged exposure to direct sunlight or intense light; Indeed, ultraviolet rays can cause a change in the colors of the dial, hands and bracelet.

Avoid exposing your watch to sudden shocks or vibrations. For example, intense sporting activities such as golf or mountain biking.

If your watch has a leather strap, we recommend limiting exposure to water. Do not operate the pushers when the watch is submerged to ensure the mechanism is watertight.

Protect your watch from extreme temperatures, whether above 60°C or below 0°C. Rapid temperature variations can also affect its performance.

Keep your watch away from chemicals such as detergents, perfumes or creams, which can alter the noble materials of its case or bracelet.

If your watch comes into contact with seawater, immediately rinse your watch with'eau douce to protect its components and preserve its shine.



ANNEXES

2 CLEANING

To clean your TheTimeChanger watch, please use a microfiber wipe lightly soaked in soapy water by running along the surfaces of the case, buttons, glass, and strap of the TheTimeChanger watch. Be sure to dry the watch and strap thoroughly with a dry microfiber after cleaning.

3 WATERPROOF

The TheTimeChanger watch is proven to be water-resistant to a depth of 50 meters (5 ATM). This means that it is resistant to splashes when washing hands and to immersion in very shallow depths.

Be careful, when the watch is underwater, do not press the push buttons, at the risk of losing water resistance and damaging your watch.

The straps that come with the TheTimeChanger watch are leather straps. Therefore, please avoid contact of the bracelets with water to prevent them from degrading.

A watertightness service is recommended every 5 years.

4 BATTERY CHANGE

It is advisable to have the battery replaced by a watchmaker.

We do not recommend that you do this alone as this may damage your watch.

When you're not using your timepiece, the battery continues to power the mechanism.

Once discharged, the battery must be removed from the mechanism as the electrolyte inside could leak out of the battery, leak into the movement and damage it.

Estimated battery life is based on usage assumptions; Its actual duration may vary depending on the use of the watch.

DO NOT DISPOSE OF THE BATTERY IN THE FIRE. DO NOT CHARGE THE BATTERY. KEEP BATTERIES OUT OF THE REACH OF CHILDREN.

ANNEXES

5 GUARANTEE

The warranty period is set at 3 years, starting from the date of delivery of the product.

We are committed to taking care of the repairs of your watch only if a technical problem occurs and it is validated by SilMach.

Any damage caused by the user will result in a repair estimate and invoicing.

If you encounter any problem, please contact the after-sales service.

Any after-sales service return handled by SilMach during the warranty period will not give rise to an extension or renewal of the warranty.

6 AFTER-SALES SERVICE

If you encounter a problem despite changing the battery, please contact the service department at the following address: support@thetimechanger.com

As part of the warranty, we undertake to take back your watch in order to examine and repair it.

7 LEGAL

©THETIMECHANGER and ©SILICIUM MACHINERY are registered trademarks of ©SilMach SA.

For more information on the brand, please visit: <https://thetimechanger.com>

8 RECYCLING

Always return your used electronics, batteries and packaging materials to DEDICATED COLLECTION POINTS.